ALARM SETTER	
SD 105	
ACTUAL SCALE TYPE	

#### Use

An actual scale type setter for instrumentation. The device inputs DC voltage or DC current signal and outputs contact signal.

#### SD-HL-105

 $(80 \times 50 \times 133 \text{mm}/450 \text{g})$ 

#### **Features**

- 1. Compact plug-in type (11 pin)
- 2. Alarm can be set easily by front VR because the device is actual scale type.
- 3. Relay contact output. (1C contact)
- 4. Two-color LED indication type, state of control is understandable at one glance. (When not detected: green; When detected: red)
- 5. Dead band range can be changed by front VR.
- 6. Built-in start delay circuit. (0.5 sec)
- 7. Built-in contact delay circuit (MAX. 10 sec) is also manufacturable. (Option)
- 8. Precise setting by a digital switch is possible because the device is VR method.
- 9. Precise resistance unit for measures against current input open is manufacturable, too. (UR-1, selling separately)

### Specification

Input (input resistance)		Auxiliary supply	Common specification	
A1: DC0-10mV (approx.1M )	C3: DC0-1mA (100 )	$1: AC100V \pm 15\%,$	Consumption VA:	
A2: DC0-50mV (approx.1M)	C5: DC0-10mA (100 )	50/60Hz	AC power source:3VA	
A3: DC0-60mV (approx.1M )	C6: DC0-16mA (100 )	2 : AC110V ± 15%,	DC power source:3.5W	
A4: DC0-100mV (approx.1M )	C7: DC4-20mA (100 )	50/60Hz	Weight:	
A5: DC0-1V (approx.1M )	00 : other than those above	3 : AC200V ± 15%,	AC power source:450g	
A6: DC0-5V (approx.1M )		50/60Hz	DC power source:450g	
A7: DC0-10V (approx.1M )		4 : AC220V ± 15%,	Dead band: 0.5-5%	
A8: DC1-5V (approx.1M )		50/60Hz	(difference between operation	
		5 : DC24V ± 20%	value and return value) variable	
Input product range:	Voltage input: DC10mV-250V	6 : DC48V ± 20%		
	Current input : DC1mA-100mA	0 : other than those		
		above		

### Option Contact delay circuit (2 sec. Operation delay instantaneous return)


Contact starts to operate when input exceeded pickup value continuously for 2 sec., and returns when input falls below dropout value. The device can prevent the operation of contact that caused by instantaneous overload and other. Please specify as "with contact delay".

Type code: SD -	- 105 D	] -		
-----------------	---------	-----	--	--


#### UR-1 precise resistance unit (Selling separately)

Use UR-1 combined with an alarm setter of voltage input. When changing the alarm setter in a hot line state at the time of current input, if measures against open are necessary, connect UR-1 to socket and convert it into a voltage signal before using it. (UR-1, resistance specified)

## Connection diagram

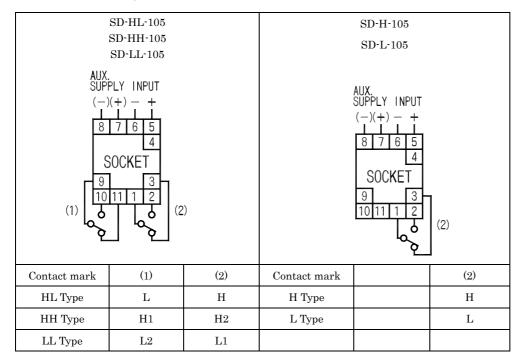

## Block diagram

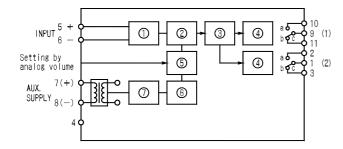

Amplifying circuit Comparator Switching circuit Relay Setting part Reference power source Power source circuit

# Purchase specifications

